



WIREPAS COMMANDER

PC TOOL FOR THETIS-I

REFERENCE MANUAL

VERSION 1.2

MARCH 30, 2021

Revision history

Manual version	SW version	Notes	Date
1.0	1.0.0.0	First release	December 2020
1.1	1.0.1.0	<ul style="list-style-type: none"> • New software version 1.0.1.0 • Updated References to Wirepas documentation 	February 2021
1.2	1.1.0.0	<ul style="list-style-type: none"> • New software version 1.1.0.0 <ul style="list-style-type: none"> – Support of the sensor data of the Thetis-I evaluation kit 	March 2021

★ For details on the software version, please refer to the chapter `Software history`.

Abbreviations and abstract

Abbreviation	Name	Description
CSAP	Configuration Service Access Point	UART control command for module configuration
DSAP	Data Service Access Point	UART control command for radio data transmission and reception
0xhh [HEX]	Hexadecimal	All numbers beginning with 0x are stated as hexadecimal numbers. All other numbers are decimal.
FTDI	Future Technology Devices Interglobal	USB-to-Serial converter chip
FW	Firmware	
MCU	Micro Controller Unit	
MSAP	Management Service Access Point	UART control command for module management
PER	Packet Error Rate	
RF	Radio frequency	Describes everything relating to the wireless transmission
SWD	Serial Wire Debug	
UART	Universal Asynchronous Receiver Transmitter	The UART allows communicating with the module of a specific interface
USB	Universal Serial Bus	

Contents

1 Overview	4
1.1 System requirements	4
1.1.1 Supported operating systems	4
1.1.2 .NET Framework	4
1.1.3 Internet connection	4
1.2 Connecting the module to the computer	4
1.3 Installation	5
2 Operation	6
2.1 Starting the program	6
2.2 COM Interface	6
2.3 Log windows	7
2.4 Diagnostics	8
2.5 Control section	9
3 Taking a new node into operation	11
4 Software history	13
5 References	14
6 Important notes	15
6.1 General customer responsibility	15
6.2 Customer responsibility related to specific, in particular safety-relevant applications	15
6.3 Best care and attention	15
6.4 Customer support for product specifications	15
6.5 Product improvements	16
6.6 Product life cycle	16
6.7 Property rights	16
6.8 General terms and conditions	16
7 Legal notice	17
7.1 Exclusion of liability	17
7.2 Suitability in customer applications	17
7.3 Trademarks	17
7.4 Usage restriction	17
8 License terms	19
8.1 Limited license	19
8.2 Usage and obligations	19
8.3 Ownership	20
8.4 Firmware update(s)	20
8.5 Disclaimer of warranty	20
8.6 Limitation of liability	20
8.7 Applicable law and jurisdiction	21
8.8 Severability clause	21
8.9 Miscellaneous	21

1 Overview

The Wirepas Commander is an easy-to-use PC software that enables complete control of the Thetis-I via its command interface. This tool offers an intuitive graphical user interface that enables the user to interact with the wireless module and understand the communication protocol between the module and the connected host.

The Wirepas Commander along with the Thetis-I allows quick prototyping and testing of various features of the Wirepas mesh network.



In order to communicate with the Wirepas module using this commander, an evaluation hardware has to be prepared. This shall include minimal pin connection (please refer to the product user manual) and adequate hardware to convert USB/Com port signals to UART interface (e.g. FTDI FT232R converter chip).



Wirepas Commander is an evaluation tool that is intended for development purposes only. It is recommended to check regularly for available updates.

1.1 System requirements

This tool is intended to run on a PC with the following requirements:

1.1.1 Supported operating systems

The following operating systems are supported:

- Windows 10, 32/64 bit
- Windows 8, 32/64 bit
- Windows 7, 32/64 bit

1.1.2 .NET Framework

Version 4.6.1 or later of the Microsoft .NET framework is required to use Wirepas Commander. Install this package if you receive a corresponding error message when starting the program.

1.1.3 Internet connection

The tool works completely offline without the need for any sort of internet connection.

1.2 Connecting the module to the computer

The wireless module evaluation hardware has to be connected to the PC. On successful installation of the PC drivers (see Section 1.3 for FTDI driver installation), the evaluation board appears as an USB serial port with a numbered COM port in the device manager as shown in the Figure 1.



Figure 1: Virtual COM port

1.3 Installation

The Wirepas Commander itself is an executable and does not require an installation. It will create folders and files on the hard drive e.g. for log file storing.

However, in case the serial-to-USB FTDI converter chip (i.e. **FT232R**) is used on the evaluation platform, it requires Virtual COM Port (VCP) drivers to be installed for proper operation. To install these drivers please follow the "Installation Guides" of FTDI found under:

<https://www.ftdichip.com/Drivers/VCP.htm>



It is recommended to restart the PC after installation of drivers.

2 Operation

2.1 Starting the program

Double-click the executable to start the program. The GUI shown in Figure 2 will appear.

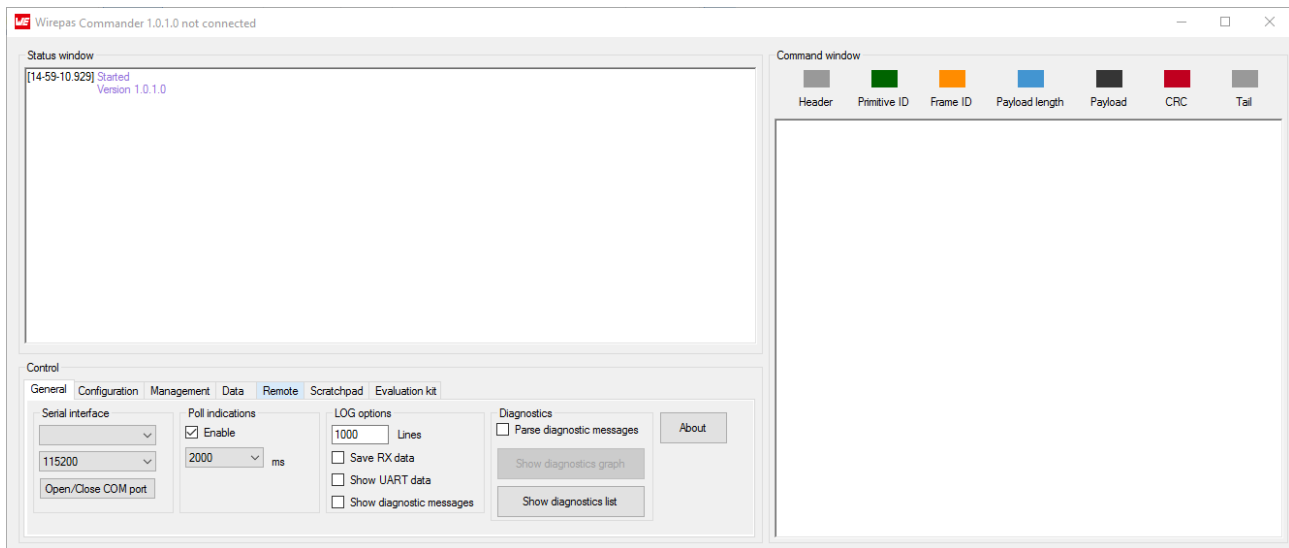


Figure 2: Start-up

2.2 COM Interface

Once connecting the Thetis-I evaluation board to the PC, the device appears as a USB serial COM port. All the COM ports on the PC are made available for connection under the "Serial interface" drop-down menu at the "General" tab of the "Control" section. The COM ports can be updated by clicking on the drop-down menu. Select the COM port corresponding to the connected radio device by scrolling through the menu. Click on the "Open/Close COM port" button to connect to the device. Messages in the status window appear indicating connect/disconnect event or errors.

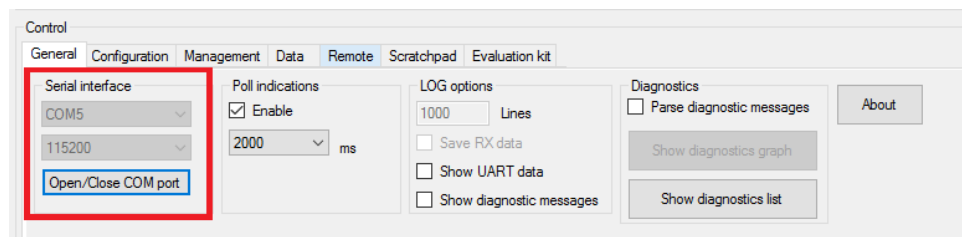


Figure 3: Open COM port



Before connecting a module or device via USB for the first time, the correct driver must be installed and a (virtual) COM port must be available (see chapter 1.3).

2.3 Log windows

The Wirepas Commander configures and controls the Thetis-I by sending commands over the serial interface. These command packets and the corresponding response from the module are displayed in the command window. The packet structure used for communication with the module is color coded for better readability. The packets sent to the module are left oriented and the ones sent from the module are right oriented. Each command packet is appended with a short packet description.

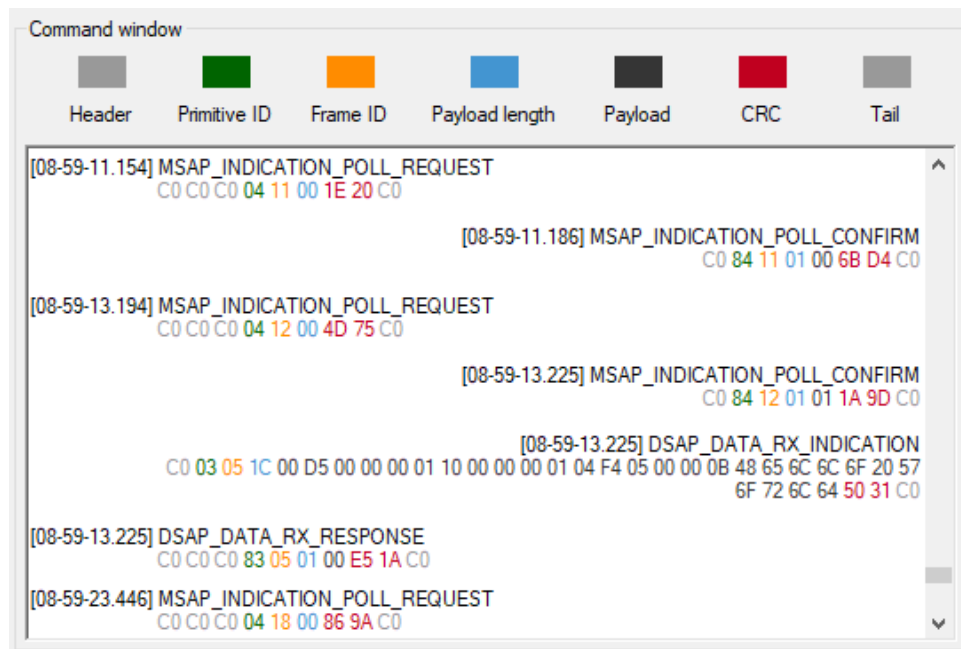


Figure 4: Command window

Besides of that, all status messages from the Wirepas Commander software tool itself are printed in the status window. The messages are color coded to easily distinguish warnings and errors from information messages.



Figure 5: Status window

Click with the right mouse button into any log window to get more options like

- copy the window content to clipboard.
- clear the window content.

The "Log options" menu in the "General" tab of the "Control" section allows to

- restrict the maximum number of lines in the status and command window.
- save received radio frames in an XML file.
- show diagnostic messages of the Wirepas mesh network, in case such a message has been received.
- show UART data in the command window.

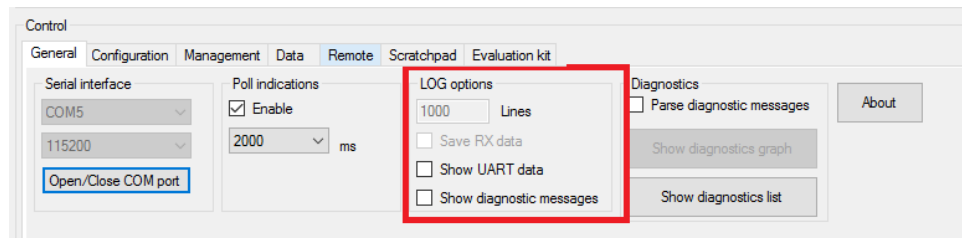


Figure 6: Log options

2.4 Diagnostics

The "Diagnostics" menu in the "General" tab of the "Control" section allows to

- parse the received diagnostic data.
- display the interpreted diagnostic data in a list.

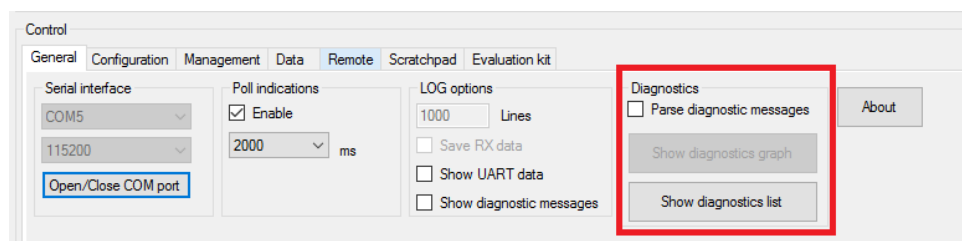


Figure 7: Diagnostics

In case no radio module is connected to the Wirepas Commander, a previously saved XML file containing the received radio frames, can be loaded and displayed.

2.5 Control section

The control section allows to configure and control the Thetis-I. It creates and sends command frames to the radio module and checks the command message responses that are returned by the radio module.

As described in the Wirepas Mesh Dual-MCU API Reference Manual [1], the Thetis-I returns a confirmation message if a request message has been sent to the radio module. Besides of that, the Thetis-I does not send any indication message (i.e. received radio data) to the host without an invitation to send. This means that the host must send repeatedly so called "MSAP-INDICATION_POLL" requests to signalize that it is ready to fetch indication messages from the radio module.

To enable the periodic transmission of "MSAP-INDICATION_POLL" requests by the Wirepas Commander the check box "Poll indications enable" in the "General" tab of the "Control" section must be set. Besides of that, the dropdown box nearby allows to define the polling interval.

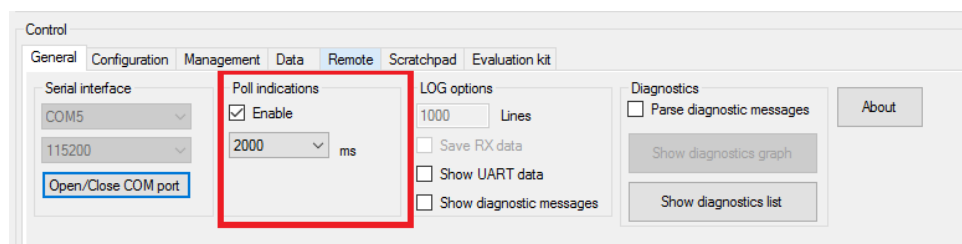


Figure 8: Enable polling to receive indication messages



In case the Thetis-I has sent an indication message to the host, the host must return a response message to signalize that the host has received the indication message. The Wirepas Commander implements this function to automatically reply with a response message.

The valid commands to control the Thetis-I can be divided into three groups. Each group of commands has its own tab in the Wirepas Commander:

Configuration CSAP messages are used to configure the radio module, if the radio stack is stopped. These commands can be found in the "CSAP" tab of the "Control" section.

Management MSAP messages are used to control the radio module and the Wirepas mesh network, if the radio stack is running. These commands can be found in the "MSAP" tab of the "Control" section.

Data DSAP messages are used to transmit and receive radio data, if the radio stack is running. These commands can be found in the "DSAP" tab of the "Control" section.



Most of the text boxes can be used to insert new values as well as to display values that have been read from the Thetis-I. If not restricted by the text box, numeric values can be entered as decimal values or as hexadecimal values, starting with a "0x" prefix.



Please note, that values that are read from the module will be displayed in the text box as decimal and hexadecimal at the same time. When writing values to the module, only one, either decimal or hexadecimal notation, has to be used.

Besides of that, there are additional tabs with special features:

Remote This tab allows to send remote commands for configuration and control of remote devices that are part of the network. It uses the DSAP functions with special format and end points. See the Wirepas Mesh Remote API Reference Manual [2] for detailed information.

Scratchpad This tab allows to use the OTAP functionality for wireless firmware update of the Wirepas mesh nodes.

Evaluation kit This tab allows to visualize the sensor data that is distributed in the Wirepas mesh network built by the sensor nodes that are part of the Thetis-I evaluation kit. In addition to that, this tab allows to configure the sensor nodes (data format and update interval) by using DSAP functions with special format and end points. Please refer to the Thetis-I evaluation kit manual to get more information about the data format and the update interval, and how to configure it.

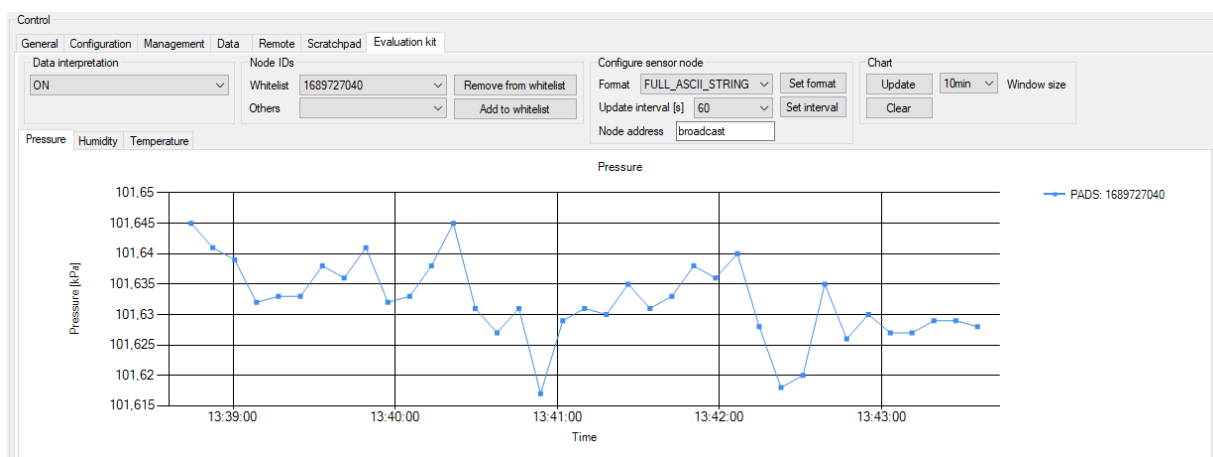


Figure 9: Evaluation kit sensor node data

3 Taking a new node into operation

In factory state, the Thetis-I must be configured first to allow participation on an existing Wirepas mesh network. To do so, please perform the following steps:

1. Connect the Wirepas test board to the PC and start the Wirepas Commander.
2. Select the right COM port and press the "Open/Close COM port" button. By default, the check box "Poll indications enable" in the "General" tab of the "Control" section is checked. Thus, the Wirepas Commander starts sending "MSAP-INDICATION_POLL" requests to the radio module and in case the radio module has an indication message pending, it will send it to the Wirepas Commander.

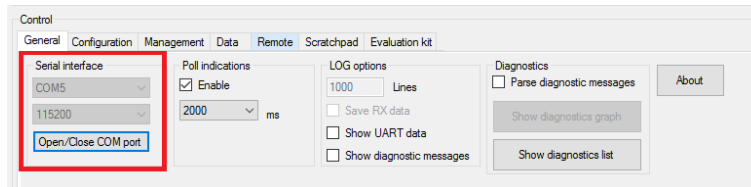


Figure 10: Open COM port

3. Configure the connected radio module to match the needs of your Wirepas mesh network. Thus go to the "CSAP" tab and set
 - a) The node address to a unique address.
 - b) The network address of the network you want to join.
 - c) The network channel of the network you want to join.
 - d) The node role. Please note that there must be at least one sink in the network.

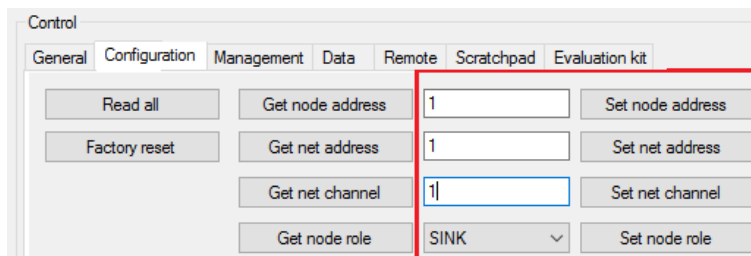


Figure 11: Configure the node

- e) (optional) The cypher key and authentication key, in case the network requires it. Please choose own keys for your network.




Figure 12: (Optional) Configure the cypher and authentication key

4. Start the radio stack on the "MSAP" tab. A "MSAP-STACK_STATE.indication" message will be received by the Wirepas Commander as soon as the stack runs.

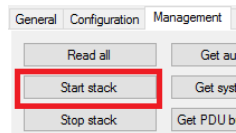


Figure 13: Start the stack

5. (Optional) In case, the node is a sink node and diagnostics messages shall be enabled, write the "App config data" with a diagnostics interval of larger than 0. Please refer to the **Wirepas dual mcu manual** [1].




Figure 14: (Optional) Write app config data

6. (Optional) In case data shall be transmitted through the Wirepas mesh network, fill the fields in the "DSAP" tab and press "TX request". Please refer to the **Wirepas dual mcu manual** [1].

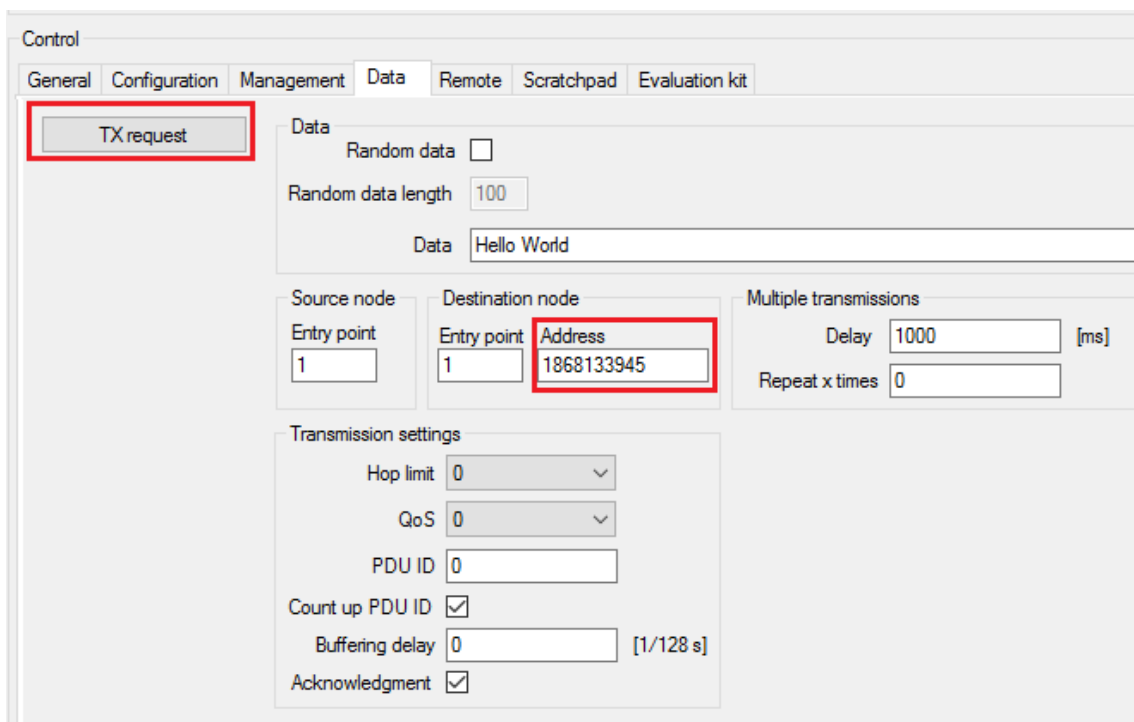


Figure 15: (Optional) Transmit "Hello world"

4 Software history

Version 1.0.0.0 "Release"

- Initial version of the tool

Version 1.0.1.0 "Release"

- Collect and display diagnostic data
- Improved data format for saving and loading of received radio frames

Version 1.1.0.0 "Release"

- Added tab "evaluation kit" that displays the data of the evaluation kit's sensor nodes

5 References

- [1] Wirepas. Wirepas Mesh Dual-MCU API Reference Manual, WP-RM-100, version 5.1A.
<https://www.we-online.com/Man/WIREPAS-I>.
- [2] Wirepas. Wirepas Mesh Remote API Reference Manual, WP-RM-117, version 5.0A.
<https://www.we-online.com/Man/WIREPAS-II>.

6 Important notes

The following conditions apply to all goods within the wireless connectivity product range of Würth Elektronik eiSos GmbH & Co. KG:

6.1 General customer responsibility

Some goods within the product range of Würth Elektronik eiSos GmbH & Co. KG contain statements regarding general suitability for certain application areas. These statements about suitability are based on our knowledge and experience of typical requirements concerning the areas, serve as general guidance and cannot be estimated as binding statements about the suitability for a customer application. The responsibility for the applicability and use in a particular customer design is always solely within the authority of the customer. Due to this fact, it is up to the customer to evaluate, where appropriate to investigate and to decide whether the device with the specific product characteristics described in the product specification is valid and suitable for the respective customer application or not. Accordingly, the customer is cautioned to verify that the documentation is current before placing orders.

6.2 Customer responsibility related to specific, in particular safety-relevant applications

It has to be clearly pointed out that the possibility of a malfunction of electronic components or failure before the end of the usual lifetime cannot be completely eliminated in the current state of the art, even if the products are operated within the range of the specifications. The same statement is valid for all software sourcecode and firmware parts contained in or used with or for products in the wireless connectivity and sensor product range of Würth Elektronik eiSos GmbH & Co. KG. In certain customer applications requiring a high level of safety and especially in customer applications in which the malfunction or failure of an electronic component could endanger human life or health, it must be ensured by most advanced technological aid of suitable design of the customer application that no injury or damage is caused to third parties in the event of malfunction or failure of an electronic component.

6.3 Best care and attention

Any product-specific data sheets, manuals, application notes, PCN's, warnings and cautions must be strictly observed in the most recent versions and matching to the products firmware revisions. This documents can be downloaded from the product specific sections on the wireless connectivity homepage.

6.4 Customer support for product specifications

Some products within the product range may contain substances, which are subject to restrictions in certain jurisdictions in order to serve specific technical requirements. Necessary information is available on request. In this case, the field sales engineer or the internal sales person in charge should be contacted who will be happy to support in this matter.

6.5 Product improvements

Due to constant product improvement, product specifications may change from time to time. As a standard reporting procedure of the Product Change Notification (PCN) according to the JEDEC-Standard, we inform about major changes. In case of further queries regarding the PCN, the field sales engineer, the internal sales person or the technical support team in charge should be contacted. The basic responsibility of the customer as per section 6.1 and 6.2 remains unaffected. All wireless connectivity module driver software "wireless connectivity SDK" and its source codes as well as all PC software tools are not subject to the Product Change Notification information process.

6.6 Product life cycle

Due to technical progress and economical evaluation we also reserve the right to discontinue production and delivery of products. As a standard reporting procedure of the Product Termination Notification (PTN) according to the JEDEC-Standard we will inform at an early stage about inevitable product discontinuance. According to this, we cannot ensure that all products within our product range will always be available. Therefore, it needs to be verified with the field sales engineer or the internal sales person in charge about the current product availability expectancy before or when the product for application design-in disposal is considered. The approach named above does not apply in the case of individual agreements deviating from the foregoing for customer-specific products.

6.7 Property rights

All the rights for contractual products produced by Würth Elektronik eiSos GmbH & Co. KG on the basis of ideas, development contracts as well as models or templates that are subject to copyright, patent or commercial protection supplied to the customer will remain with Würth Elektronik eiSos GmbH & Co. KG. Würth Elektronik eiSos GmbH & Co. KG does not warrant or represent that any license, either expressed or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, application, or process in which Würth Elektronik eiSos GmbH & Co. KG components or services are used.

6.8 General terms and conditions

Unless otherwise agreed in individual contracts, all orders are subject to the current version of the "General Terms and Conditions of Würth Elektronik eiSos Group", last version available at www.we-online.com.

7 Legal notice

7.1 Exclusion of liability

Würth Elektronik eiSos GmbH & Co. KG considers the information in this document to be correct at the time of publication. However, Würth Elektronik eiSos GmbH & Co. KG reserves the right to modify the information such as technical specifications or functions of its products or discontinue the production of these products or the support of one of these products without any written announcement or notification to customers. The customer must make sure that the information used corresponds to the latest published information. Würth Elektronik eiSos GmbH & Co. KG does not assume any liability for the use of its products. Würth Elektronik eiSos GmbH & Co. KG does not grant licenses for its patent rights or for any other of its intellectual property rights or third-party rights.

Notwithstanding anything above, Würth Elektronik eiSos GmbH & Co. KG makes no representations and/or warranties of any kind for the provided information related to their accuracy, correctness, completeness, usage of the products and/or usability for customer applications. Information published by Würth Elektronik eiSos GmbH & Co. KG regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof.

7.2 Suitability in customer applications

The customer bears the responsibility for compliance of systems or units, in which Würth Elektronik eiSos GmbH & Co. KG products are integrated, with applicable legal regulations. Customer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of Würth Elektronik eiSos GmbH & Co. KG components in its applications, notwithstanding any applications-related information or support that may be provided by Würth Elektronik eiSos GmbH & Co. KG. Customer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences lessen the likelihood of failures that might cause harm and take appropriate remedial actions. The customer will fully indemnify Würth Elektronik eiSos GmbH & Co. KG and its representatives against any damages arising out of the use of any Würth Elektronik eiSos GmbH & Co. KG components in safety-critical applications.

7.3 Trademarks

AMBER wireless is a registered trademark of Würth Elektronik eiSos GmbH & Co. KG. All other trademarks, registered trademarks, and product names are the exclusive property of the respective owners.

7.4 Usage restriction

Würth Elektronik eiSos GmbH & Co. KG products have been designed and developed for usage in general electronic equipment only. This product is not authorized for use in equipment where a higher safety standard and reliability standard is especially required or where a failure of the product is reasonably expected to cause severe personal injury or death,

unless the parties have executed an agreement specifically governing such use. Moreover, Würth Elektronik eiSos GmbH & Co. KG products are neither designed nor intended for use in areas such as military, aerospace, aviation, nuclear control, submarine, transportation (automotive control, train control, ship control), transportation signal, disaster prevention, medical, public information network etc. Würth Elektronik eiSos GmbH & Co. KG must be informed about the intent of such usage before the design-in stage. In addition, sufficient reliability evaluation checks for safety must be performed on every electronic component, which is used in electrical circuits that require high safety and reliability function or performance. By using Würth Elektronik eiSos GmbH & Co. KG products, the customer agrees to these terms and conditions.

8 License terms

This License Terms will take effect upon the purchase and usage of the Würth Elektronik eiSos GmbH & Co. KG wireless connectivity products. You hereby agree that this license terms is applicable to the product and the incorporated software, firmware and source codes (collectively, "Software") made available by Würth Elektronik eiSos in any form, including but not limited to binary, executable or source code form.

The software included in any Würth Elektronik eiSos wireless connectivity product is purchased to you on the condition that you accept the terms and conditions of this license terms. You agree to comply with all provisions under this license terms.

8.1 Limited license

Würth Elektronik eiSos hereby grants you a limited, non-exclusive, non-transferable and royalty-free license to use the software and under the conditions that will be set forth in this license terms. You are free to use the provided Software only in connection with one of the products from Würth Elektronik eiSos to the extent described in this license terms. You are entitled to change or alter the source code for the sole purpose of creating an application embedding the Würth Elektronik eiSos wireless connectivity product. The transfer of the source code to third parties is allowed to the sole extent that the source code is used by such third parties in connection with our product or another hardware provided by Würth Elektronik eiSos under strict adherence of this license terms. Würth Elektronik eiSos will not assume any liability for the usage of the incorporated software and the source code. You are not entitled to transfer the source code in any form to third parties without prior written consent of Würth Elektronik eiSos.

You are not allowed to reproduce, translate, reverse engineer, decompile, disassemble or create derivative works of the incorporated Software and the source code in whole or in part. No more extensive rights to use and exploit the products are granted to you.

8.2 Usage and obligations

The responsibility for the applicability and use of the Würth Elektronik eiSos wireless connectivity product with the incorporated Firmware in a particular customer design is always solely within the authority of the customer. Due to this fact, it is up to you to evaluate and investigate, where appropriate, and to decide whether the device with the specific product characteristics described in the product specification is valid and suitable for your respective application or not.

You are responsible for using the Würth Elektronik eiSos wireless connectivity product with the incorporated Firmware in compliance with all applicable product liability and product safety laws. You acknowledge to minimize the risk of loss and harm to individuals and bear the risk for failure leading to personal injury or death due to your usage of the product.

Würth Elektronik eiSos' products with the incorporated Firmware are not authorized for use in safety-critical applications, or where a failure of the product is reasonably expected to cause severe personal injury or death. Moreover, Würth Elektronik eiSos' products with the incorporated Firmware are neither designed nor intended for use in areas such as military, aerospace, aviation, nuclear control, submarine, transportation (automotive control, train control, ship control), transportation signal, disaster prevention, medical, public information network etc. You shall inform Würth Elektronik eiSos about the intent of such usage before design-in stage. In certain customer applications requiring a very high level of safety and in which the malfunction or failure of an electronic component could endanger human life or

health, you must ensure to have all necessary expertise in the safety and regulatory ramifications of your applications. You acknowledge and agree that you are solely responsible for all legal, regulatory and safety-related requirements concerning your products and any use of Würth Elektronik eiSos' products with the incorporated Firmware in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by Würth Elektronik eiSos. YOU SHALL INDEMNIFY WÜRTH ELEKTRONIK EISOS AGAINST ANY DAMAGES ARISING OUT OF THE USE OF WÜRTH ELEKTRONIK EISOS' PRODUCTS WITH THE INCORPORATED FIRMWARE IN SUCH SAFETY-CRITICAL APPLICATIONS.

8.3 Ownership

The incorporated Firmware created by Würth Elektronik eiSos is and will remain the exclusive property of Würth Elektronik eiSos.

8.4 Firmware update(s)

You have the opportunity to request the current and actual Firmware for a bought wireless connectivity Product within the time of warranty. However, Würth Elektronik eiSos has no obligation to update a modules firmware in their production facilities, but can offer this as a service on request. The upload of firmware updates falls within your responsibility, e.g. via ACC or another software for firmware updates. Firmware updates will not be communicated automatically. It is within your responsibility to check the current version of a firmware in the latest version of the product manual on our website. The revision table in the product manual provides all necessary information about firmware updates. There is no right to be provided with binary files, so called "Firmware images", those could be flashed through JTAG, SWD, Spi-Bi-Wire, SPI or similar interfaces.

8.5 Disclaimer of warranty

THE FIRMWARE IS PROVIDED "AS IS". YOU ACKNOWLEDGE THAT WÜRTH ELEKTRONIK EISOS MAKES NO REPRESENTATIONS AND WARRANTIES OF ANY KIND RELATED TO, BUT NOT LIMITED TO THE NON-INFRINGEMENT OF THIRD PARTIES' INTELLECTUAL PROPERTY RIGHTS OR THE MERCHANTABILITY OR FITNESS FOR YOUR INTENDED PURPOSE OR USAGE. WÜRTH ELEKTRONIK EISOS DOES NOT WARRANT OR REPRESENT THAT ANY LICENSE, EITHER EXPRESS OR IMPLIED, IS GRANTED UNDER ANY PATENT RIGHT, COPYRIGHT, MASK WORK RIGHT, OR OTHER INTELLECTUAL PROPERTY RIGHT RELATING TO ANY COMBINATION, MACHINE, OR PROCESS IN WHICH THE WÜRTH ELEKTRONIK EISOS' PRODUCT WITH THE INCORPORATED FIRMWARE IS USED. INFORMATION PUBLISHED BY WÜRTH ELEKTRONIK EISOS REGARDING THIRD-PARTY PRODUCTS OR SERVICES DOES NOT CONSTITUTE A LICENSE FROM WÜRTH ELEKTRONIK EISOS TO USE SUCH PRODUCTS OR SERVICES OR A WARRANTY OR ENDORSEMENT THEREOF.

8.6 Limitation of liability

Any liability not expressly provided by Würth Elektronik eiSos shall be disclaimed. You agree to hold us harmless from any third-party claims related to your usage of the Würth Elektronik eiSos' products with the incorporated Firmware, software and source code. Würth

Elektronik eiSos disclaims any liability for any alteration, development created by you or your customers as well as for any combination with other products.

8.7 Applicable law and jurisdiction

Applicable law to this license terms shall be the laws of the Federal Republic of Germany. Any dispute, claim or controversy arising out of or relating to this license terms shall be resolved and finally settled by the court competent for the location of Würth Elektronik eiSos' registered office.

8.8 Severability clause

If a provision of this license terms is or becomes invalid, unenforceable or null and void, this shall not affect the remaining provisions of the terms. The parties shall replace any such provisions with new valid provisions that most closely approximate the purpose of the terms.

8.9 Miscellaneous

Würth Elektronik eiSos reserves the right at any time to change this terms at its own discretion. It is your responsibility to check at Würth Elektronik eiSos homepage for any updates. Your continued usage of the products will be deemed as the acceptance of the change.

We recommend you to be updated about the status of new firmware and software, which is available on our website or in our data sheet and manual, and to implement new software in your device where appropriate.

By ordering a wireless connectivity product, you accept this license terms in all terms.

List of Figures

1	Virtual COM port	5
2	Start-up	6
3	Open COM port	6
4	Command window	7
5	Status window	7
6	Log options	8
7	Diagnostics	8
8	Enable polling to receive indication messages	9
9	Evaluation kit sensor node data	10
10	Open COM port	11
11	Configure the node	11
12	(Optional) Configure the cypher and authentication key	11
13	Start the stack	12
14	(Optional) Write app config data	12
15	(Optional) Transmit "Hello world"	12

List of Tables



more than you expect



**Internet
of Things**



**Monitoring
& Control**



**Automated Meter
Reading**

Contact:

Würth Elektronik eiSos GmbH & Co. KG
Division Wireless Connectivity & Sensors

Max-Eyth-Straße 1
74638 Waldenburg
Germany

Tel.: +49 651 99355-0
Fax.: +49 651 99355-69
www.we-online.com/wireless-connectivity

